



Canada Sundecks Ltd.

#3 20133 102nd Ave.
Langley, BC VM 4B4
Phone: (604) 513-0416
Fax: (604) 513-0428


Drawing Title:

Stucco Detail

Updated: January 1, 2020

System: DeckRite

Detail Number: DCS 120

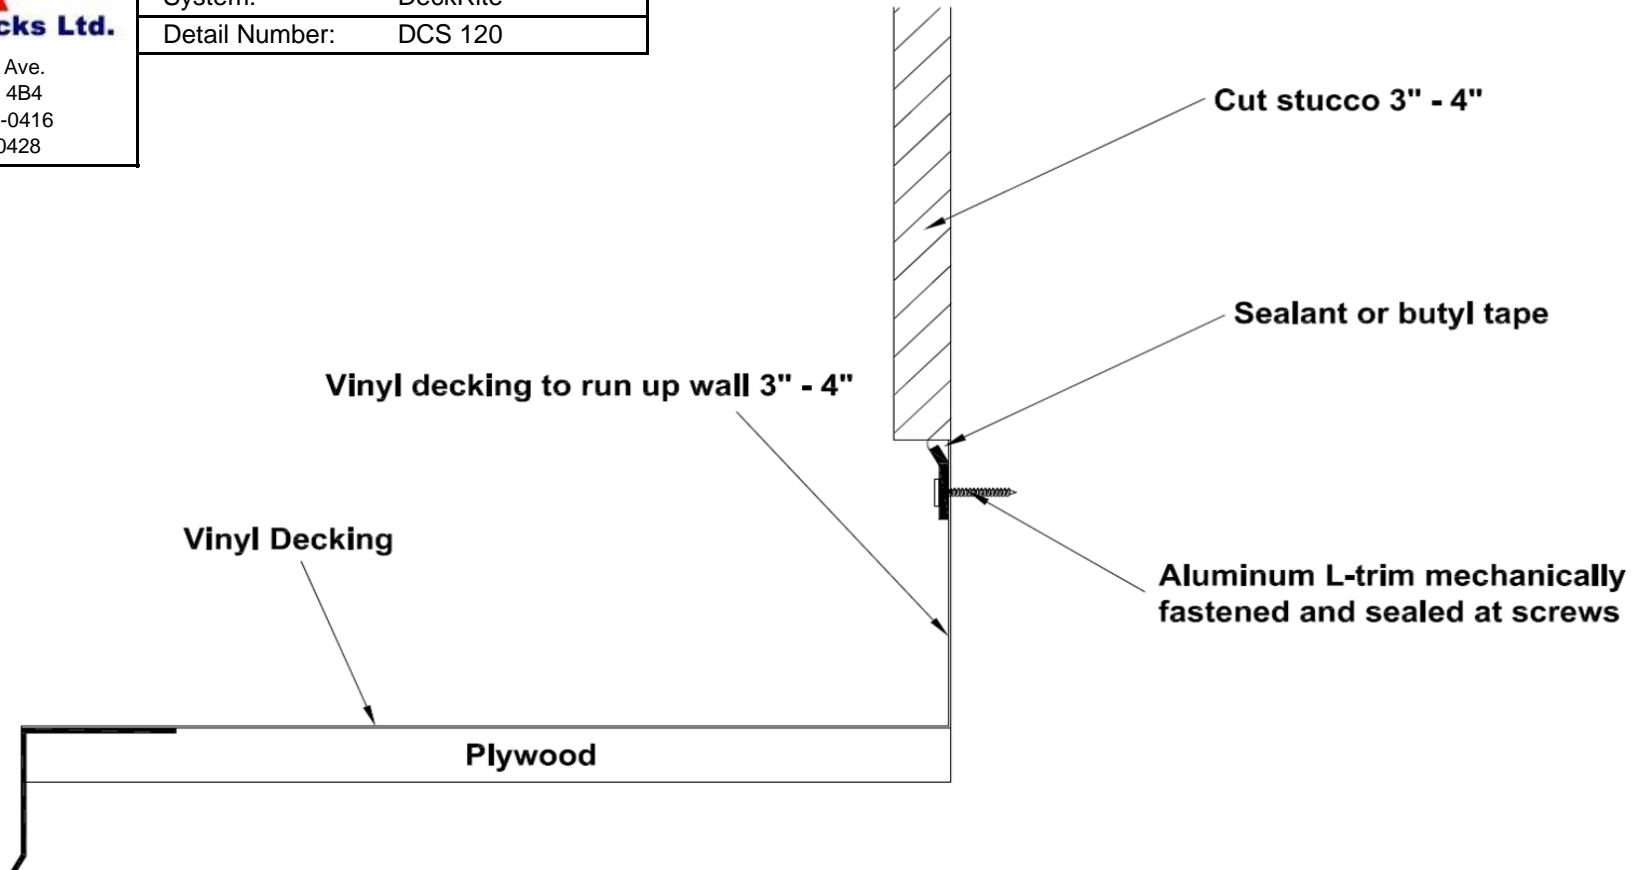

1. Cut stucco up 3" to 4"
2. Run vinyl to underside of stucco
3. Install sealant or butyl tape
4. Install aluminum L-trim